
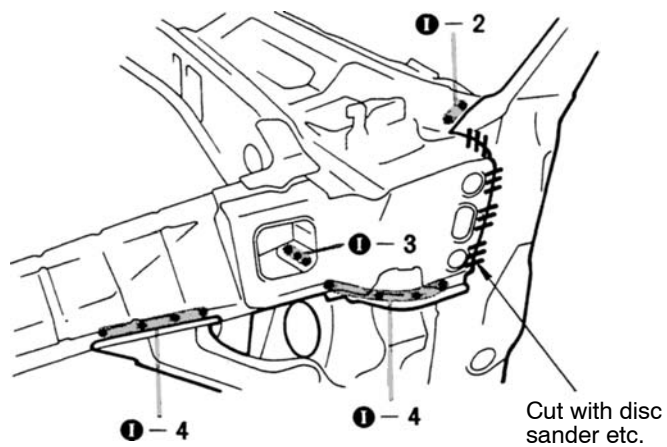
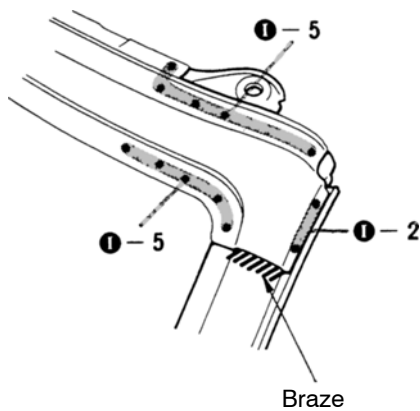
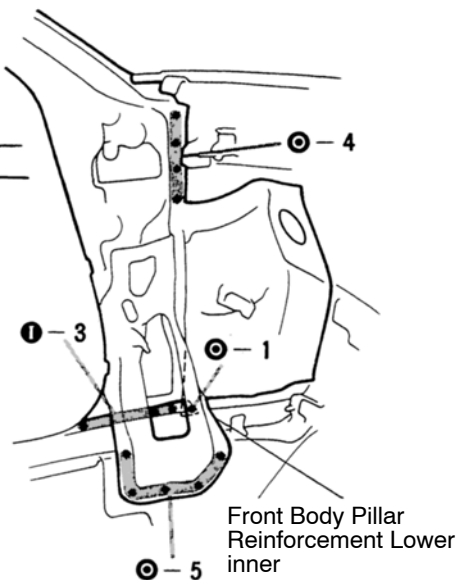
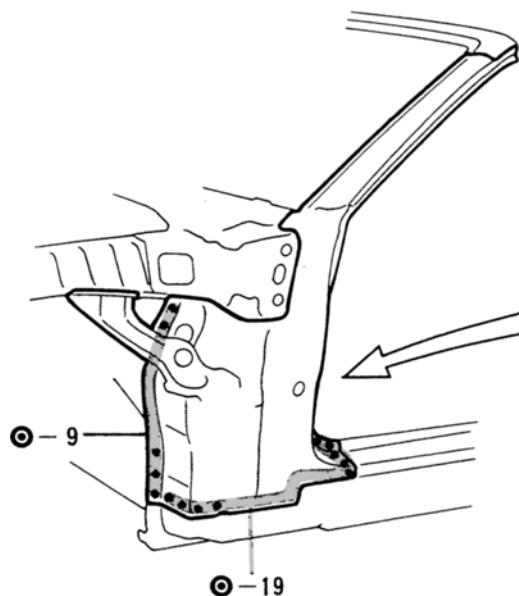


# FRONT BODY PILLAR (ASSY)

## REMOVAL

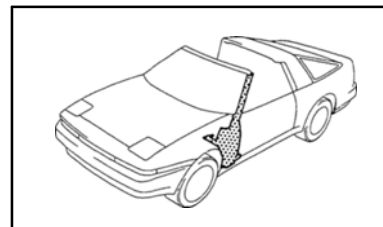

1. Replace the front body pillar together with front body pillar reinforcement lower inner.

# INSTALLATION

Diagram illustrating the installation of the rear window assembly, showing various components and their positions:

- Component 9 (Seal/Trim) is shown being installed onto the window frame.
- Component 19 (Seal/Trim) is shown being installed onto the window frame.
- Component 3 (Seal/Trim) is shown being installed onto the window frame.
- Component 5 (Seal/Trim) is shown being installed onto the window frame.
- Component 8 (Seal/Trim) is shown being installed onto the window frame.
- Component 4 (Seal/Trim) is shown being installed onto the window frame.
- Component 1 (Seal/Trim) is shown being installed onto the window frame.
- Component 2 (Seal/Trim) is shown being installed onto the window frame.
- Component 5 (Seal/Trim) is shown being installed onto the window frame.
- Component 3 (Seal/Trim) is shown being installed onto the window frame.
- Component 4 (Seal/Trim) is shown being installed onto the window frame.

Installation steps and notes:

- Tack Weld (30 mm each)
- Braze
- Tack Weld (20 mm each)

[Reference (mm)]

mm
20
30
790
791
946
1,162
1,402
1,407

1. Temporarily install the new part and check the fit of the removable roof, front door, front fender, hood and windshield glass.