
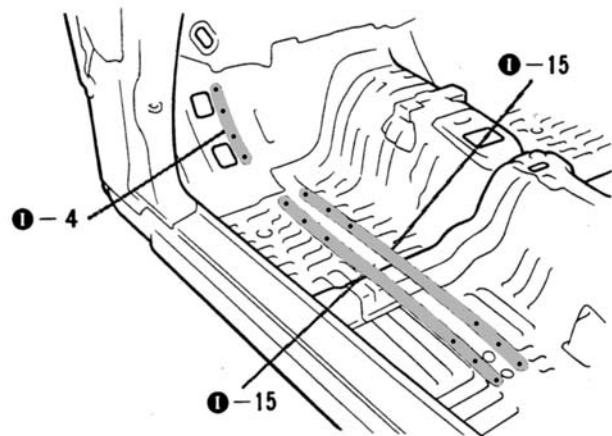
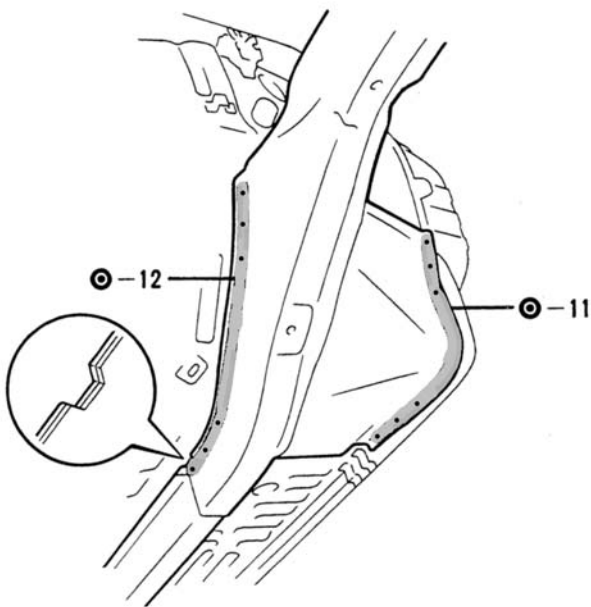
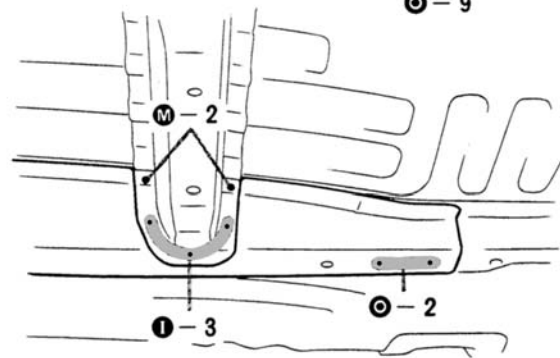
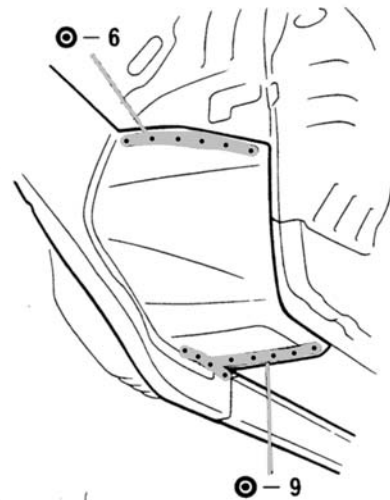
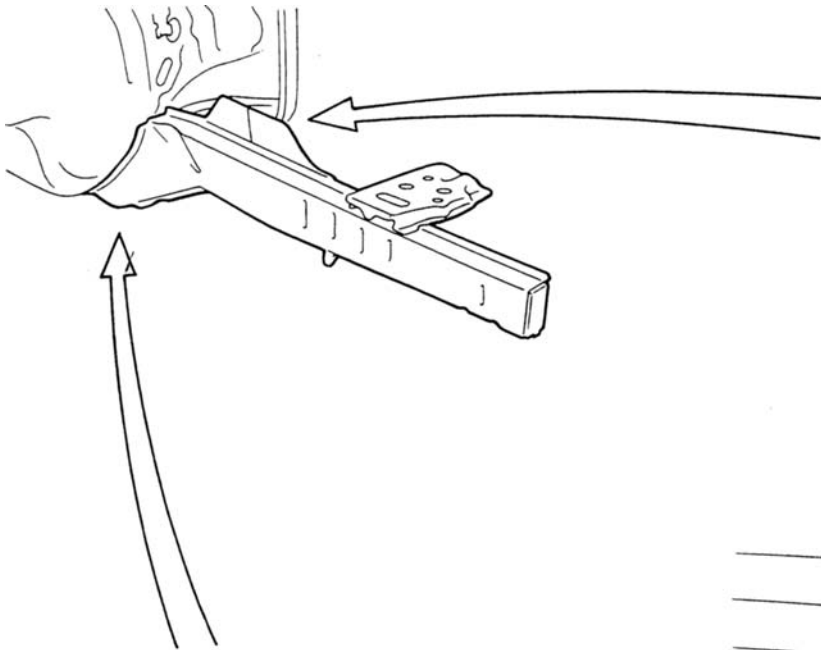
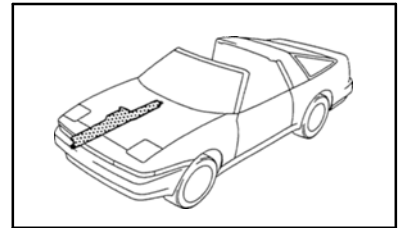
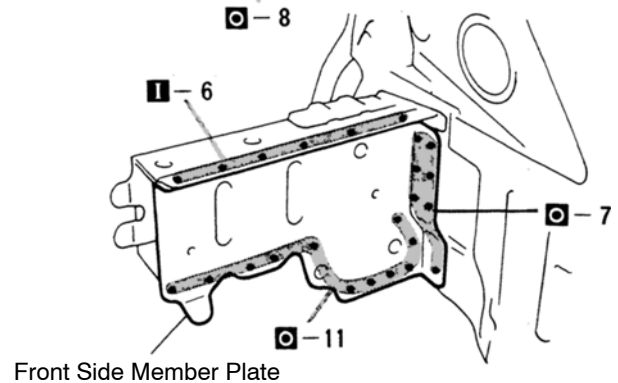
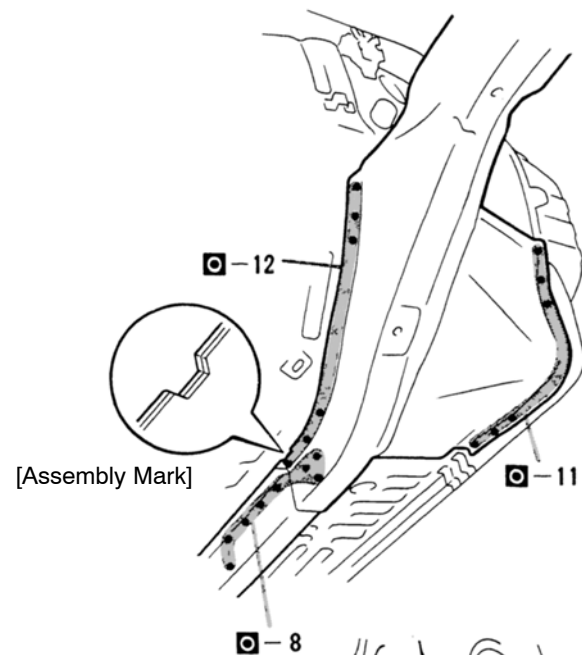
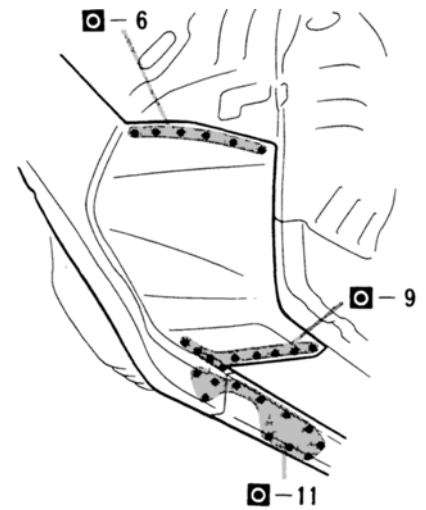
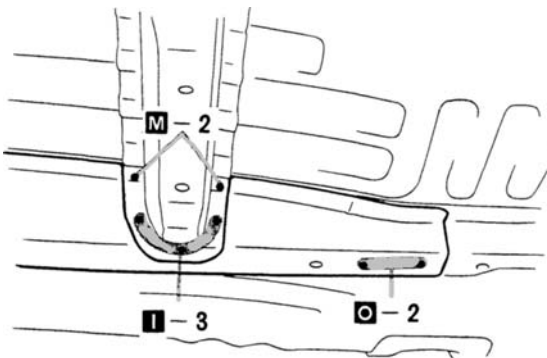
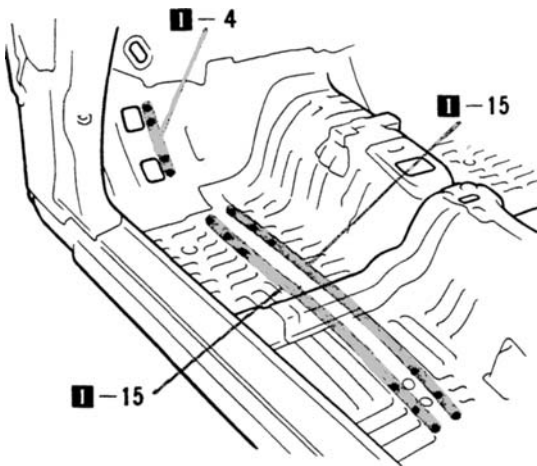


FRONT SIDE MEMBER (ASSY)**REMOVAL (With the front fender apron removed.)**

1. Replace the front floor under reinforcement together with the front side member reinforcement.

INSTALLATION

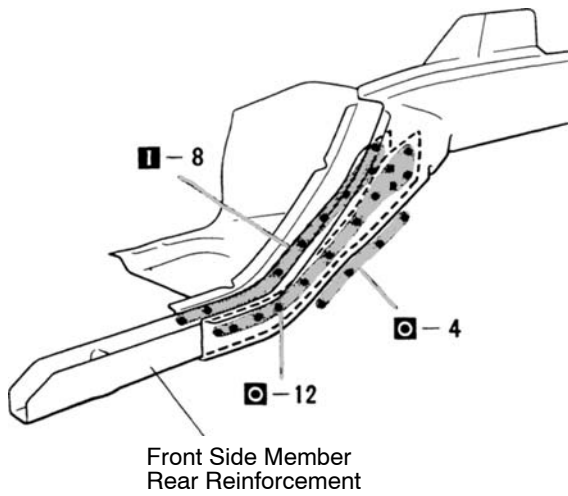

1. Before temporarily installing the new part, weld the front side member reinforcement to front side member.
2. Temporarily install the new member, measure each part in accordance with the body dimension diagram.