

Transmission Case


INSPECTION OF TRANSMISSION CASE

INSPECT TRANSMISSION CASE BUSHING

Using a cylinder gauge, measure the inside diameter of the transmission case rear bushing.

Maximum inside diameter: 38.19 mm (1.5035 in.)

If the inside diameter is greater than the maximum, replace the transmission case.

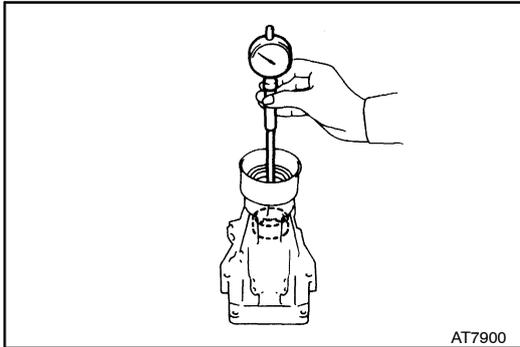

Extension Housing

INSPECTION OF EXTENSION HOUSING

INSPECT EXTENSION HOUSING BUSHING

Using a cylinder gauge, measure the inside diameter of the extension housing bushing.

Maximum inside diameter: 40.09 mm (1.5783 in.)

If the inside diameter is greater than the maximum, replace the extension housing.