
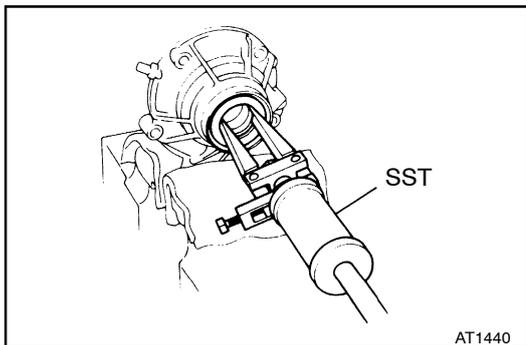


## Transfer Extension Housing COMPONENTS

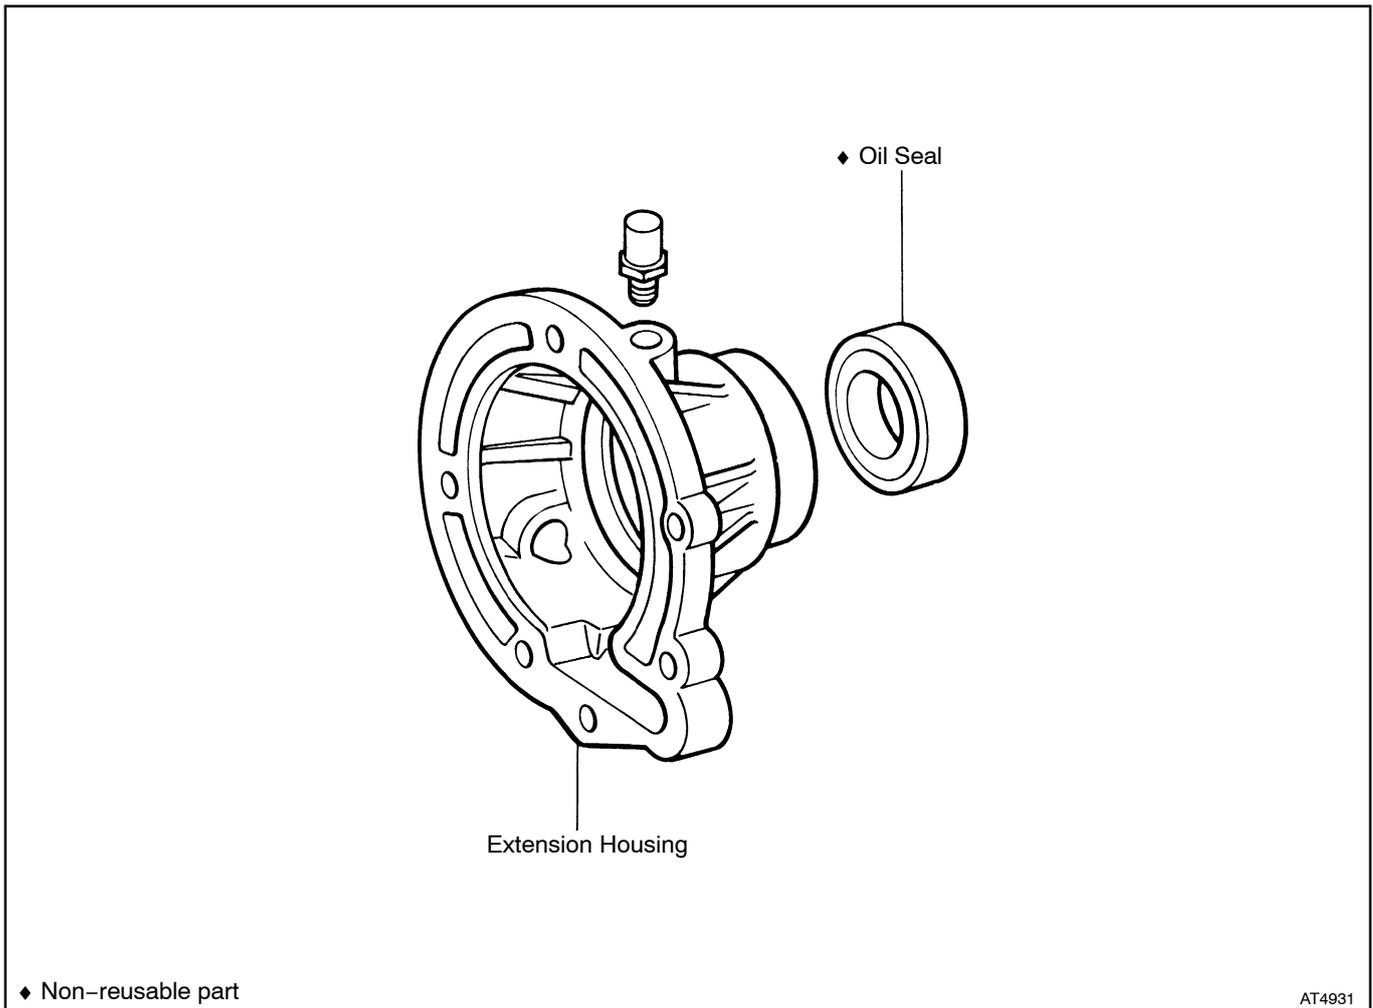

### INSPECTION OF TRANSFER EXTENSION HOUSING

HINT: If the bearing is worn, replace the extension housing assembly.

#### IF NECESSARY, REPLACE OIL SEAL

(a) Using SST, remove the oil seal.

SST 09308-00010

(b) Using SST and a press, install a new oil seal to the extension housing.

SST 09608-35014 (09608-06020, 09608-06100)

**Oil seal depth: 2.7 - 3.3 mm (0.106 - 0.130 in.)**

(c) Coat the oil seal lip with MP grease.

