

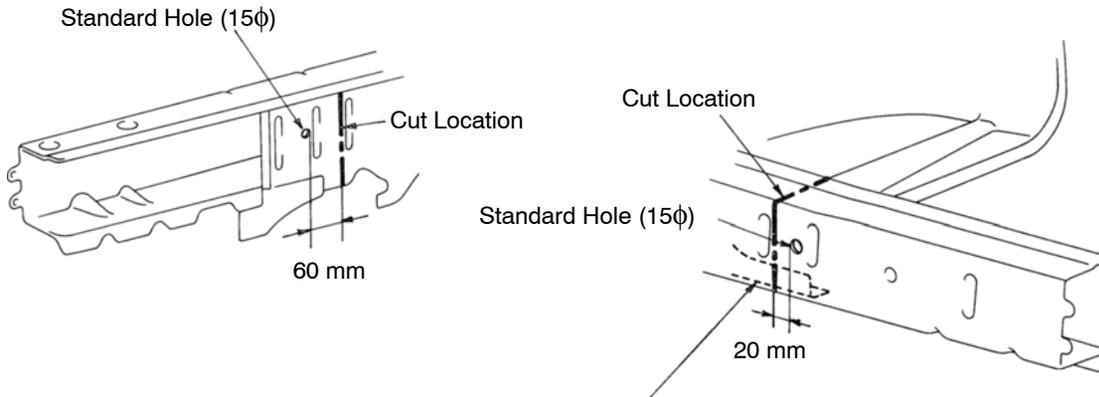
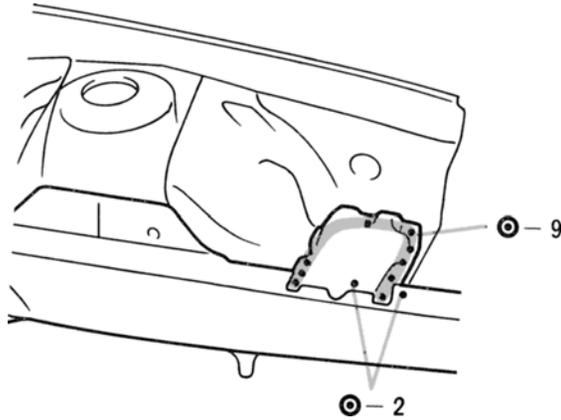


FRONT SIDE MEMBER (CUT-P)


REMOVAL

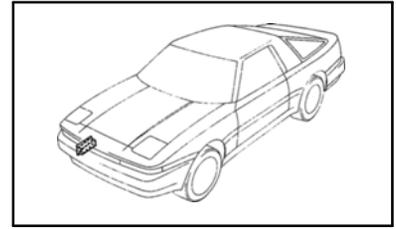

NOTE: Be careful not to damage the reinforcement when cutting the side member.

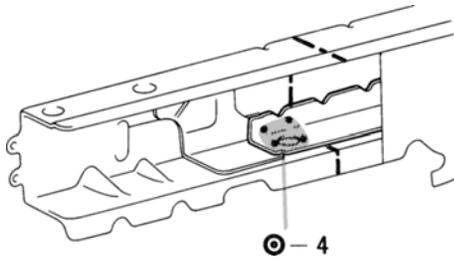

[USA and Canada]

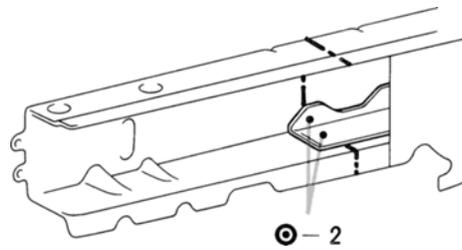

[Ex. USA and Canada]


1. Before cutting the side member, remove the battery carrier support. (LH only)
2. Cut the front side member as shown above.

NOTE: Be careful not to damage the reinforcement when cutting the side member.


mm	in.
15	0.59
20	0.79
60	2.36

INSTALLATION


Cut for supply part

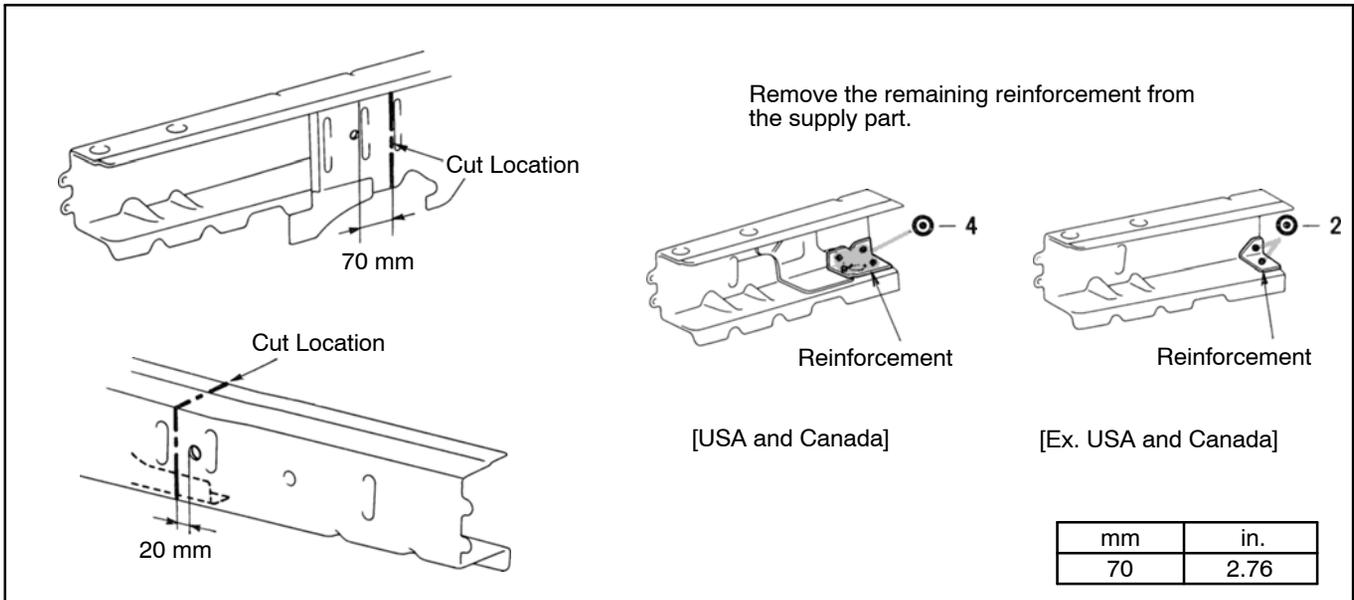

[USA and Canada]

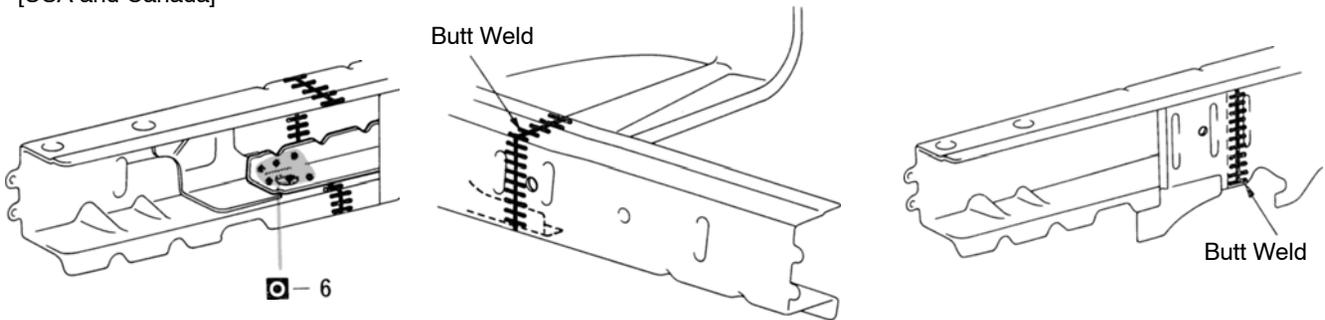

[Ex. USA and Canada]

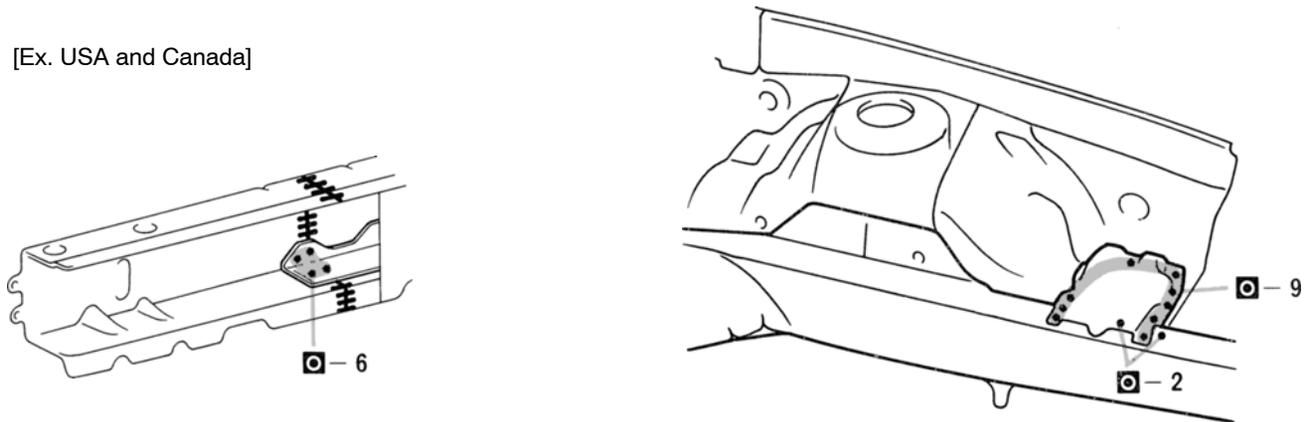

1. Cut the supply part shown above.

NOTE: Cut the front side member and the reinforcement at the same place.

2. Remove the remaining reinforcement from the supply part.

3. Temporarily install the new member, measure each part in accordance with the body dimension diagram.

4. After installing the new member, install the front side member plate. (See page [RE-13](#))

5. After installing the new member, install the battery carrier support. (LH only)