
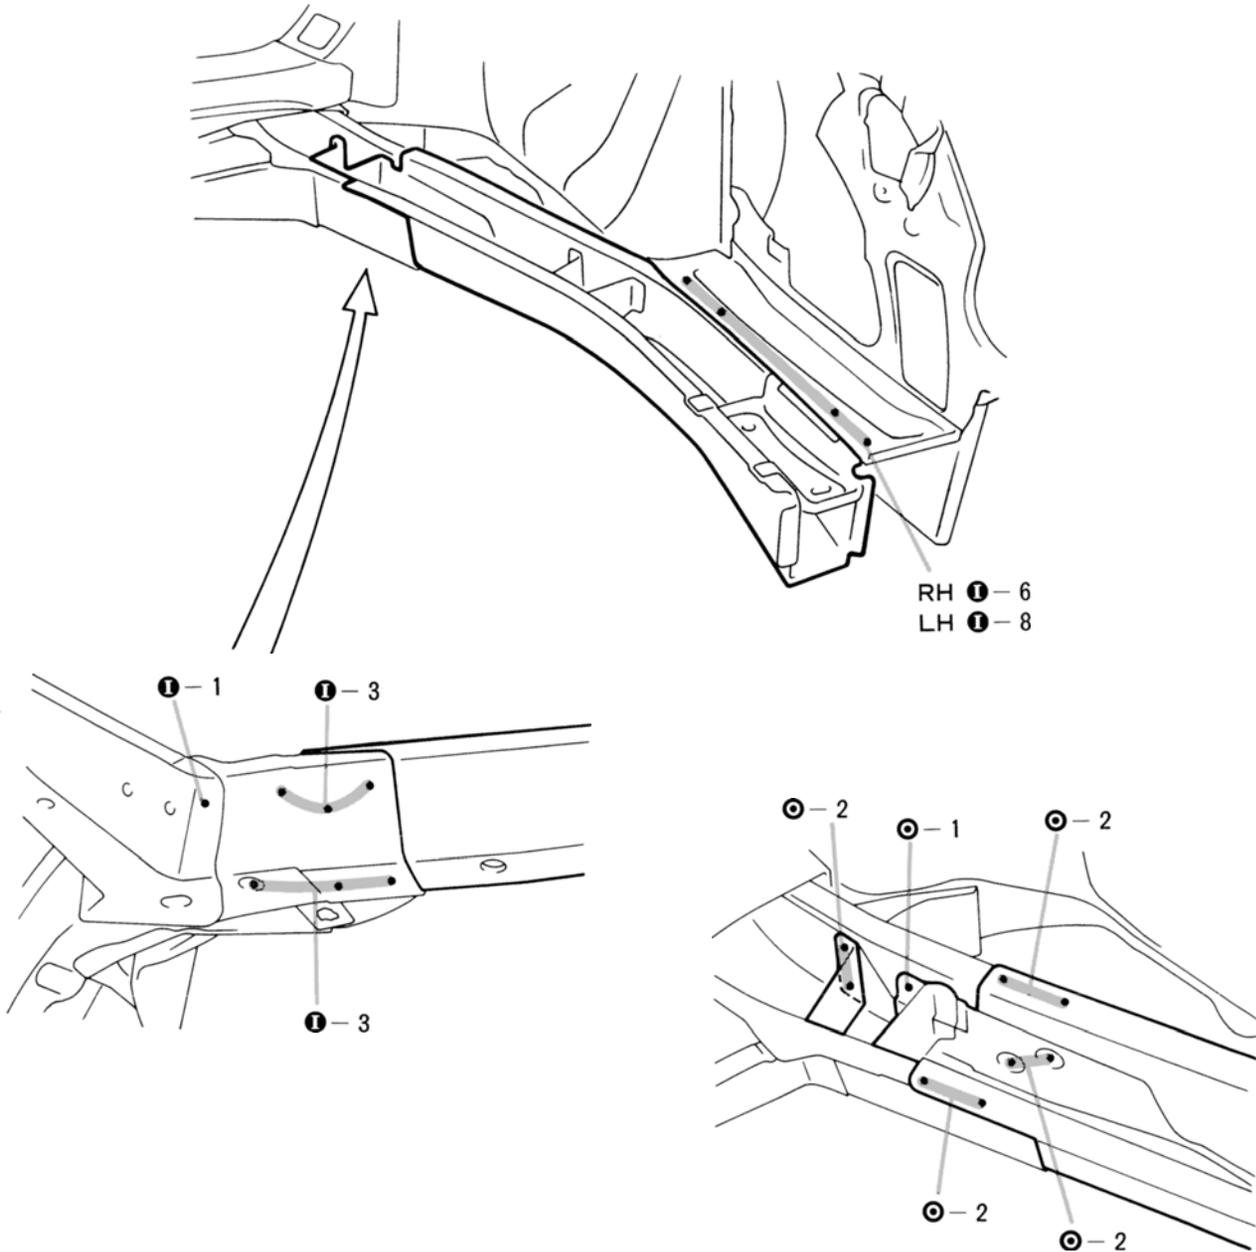



REAR FLOOR SIDE MEMBER (ASSY)

REMOVAL

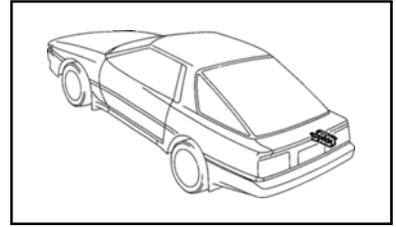

1. Before removing the rear floor side member, remove the rear floor pan.

INSTALLATION

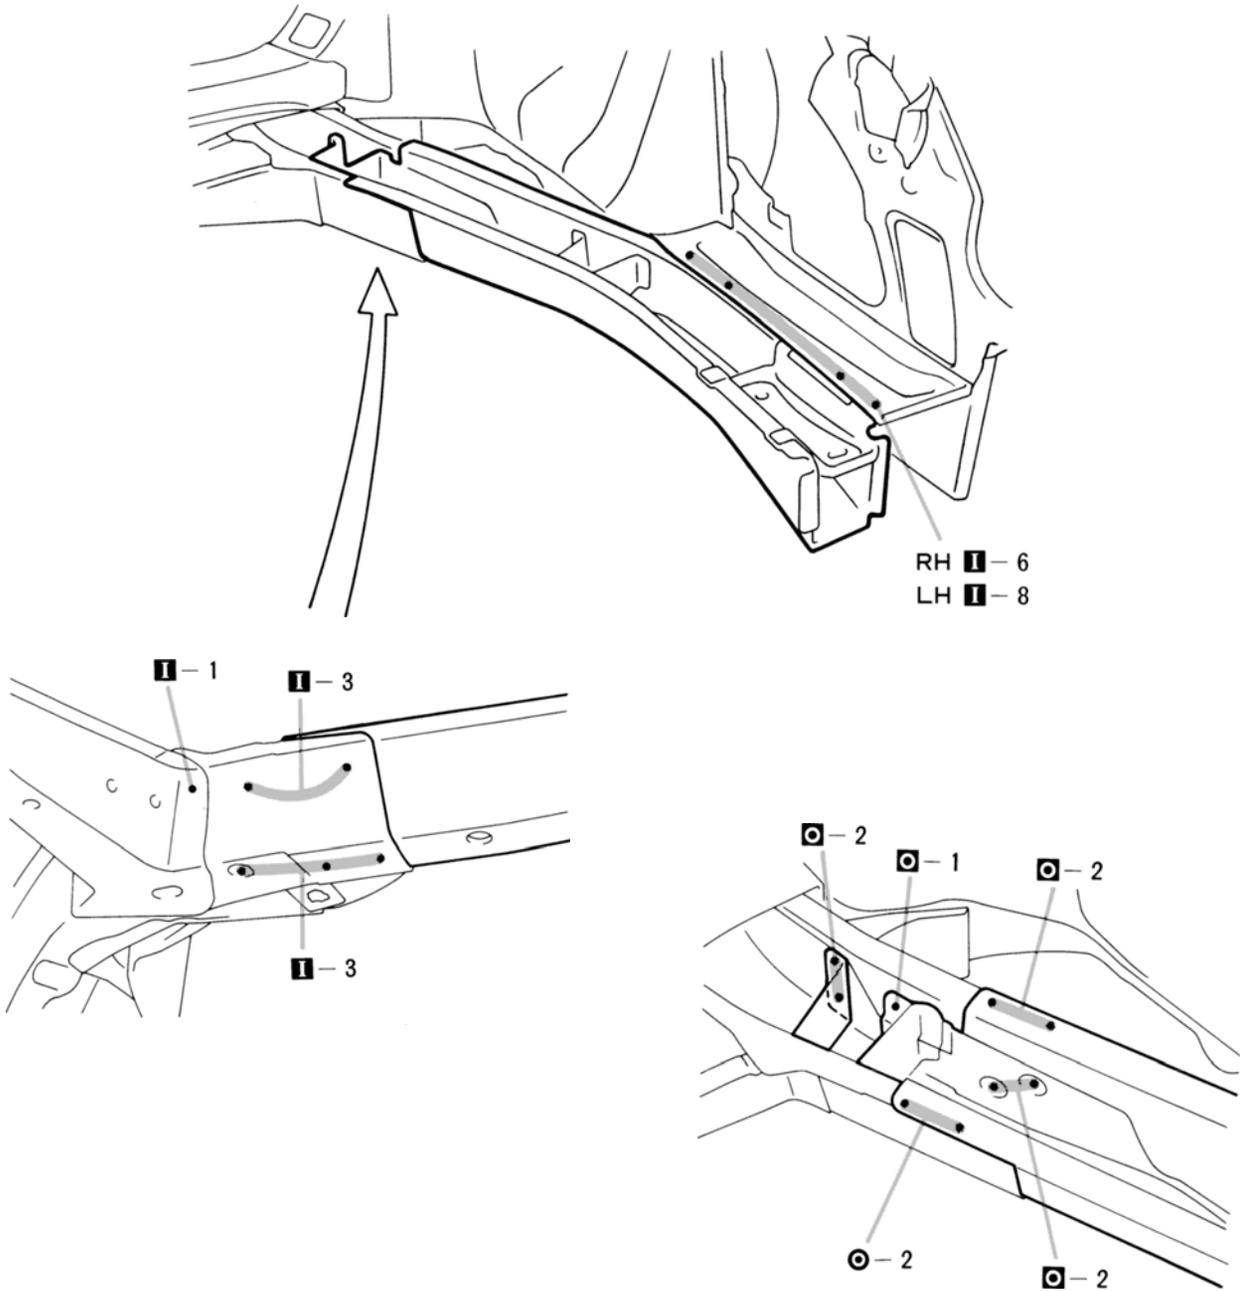

1. Temporarily install the new part and measure each part in accordance with the body dimension diagram.