
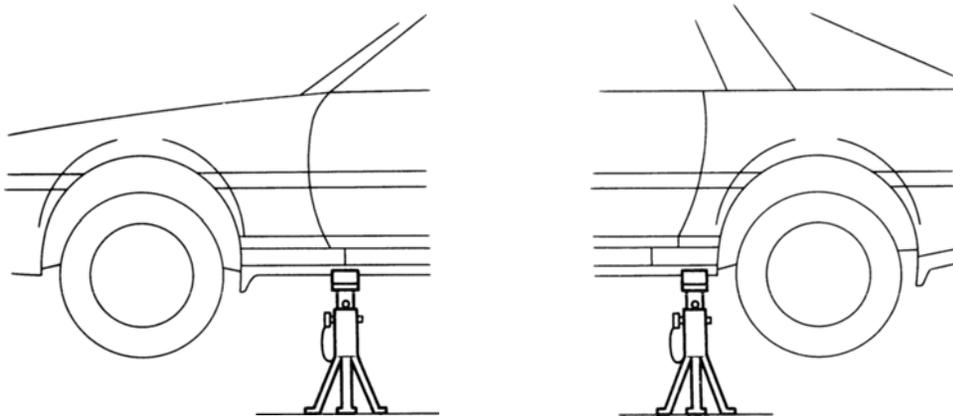


VEHICLE LIFT AND SUPPORT LOCATIONS

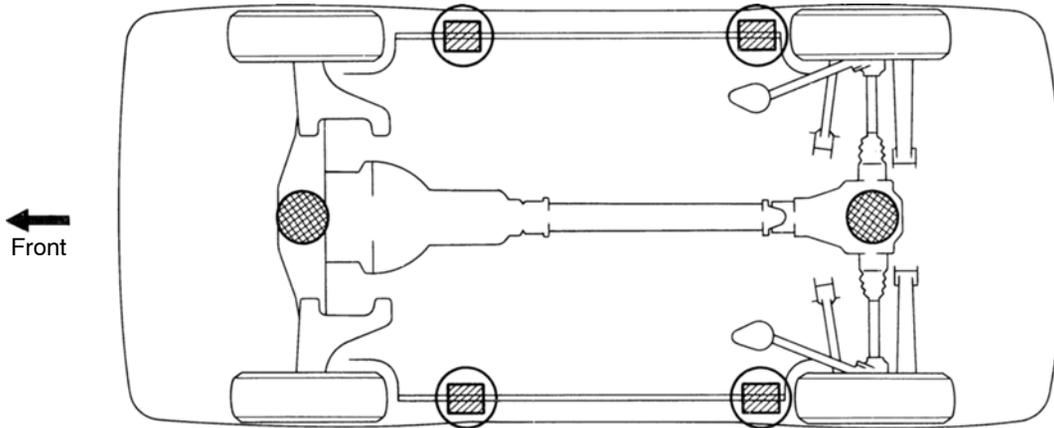

- JACK POSITION** _____ 
- Front Center of front suspension crossmember
- Rear Center of differential carrier
- PANTOGRAPH JACK POSITION** _____ 
- SUPPORT POSITION**
- Safety stand 