
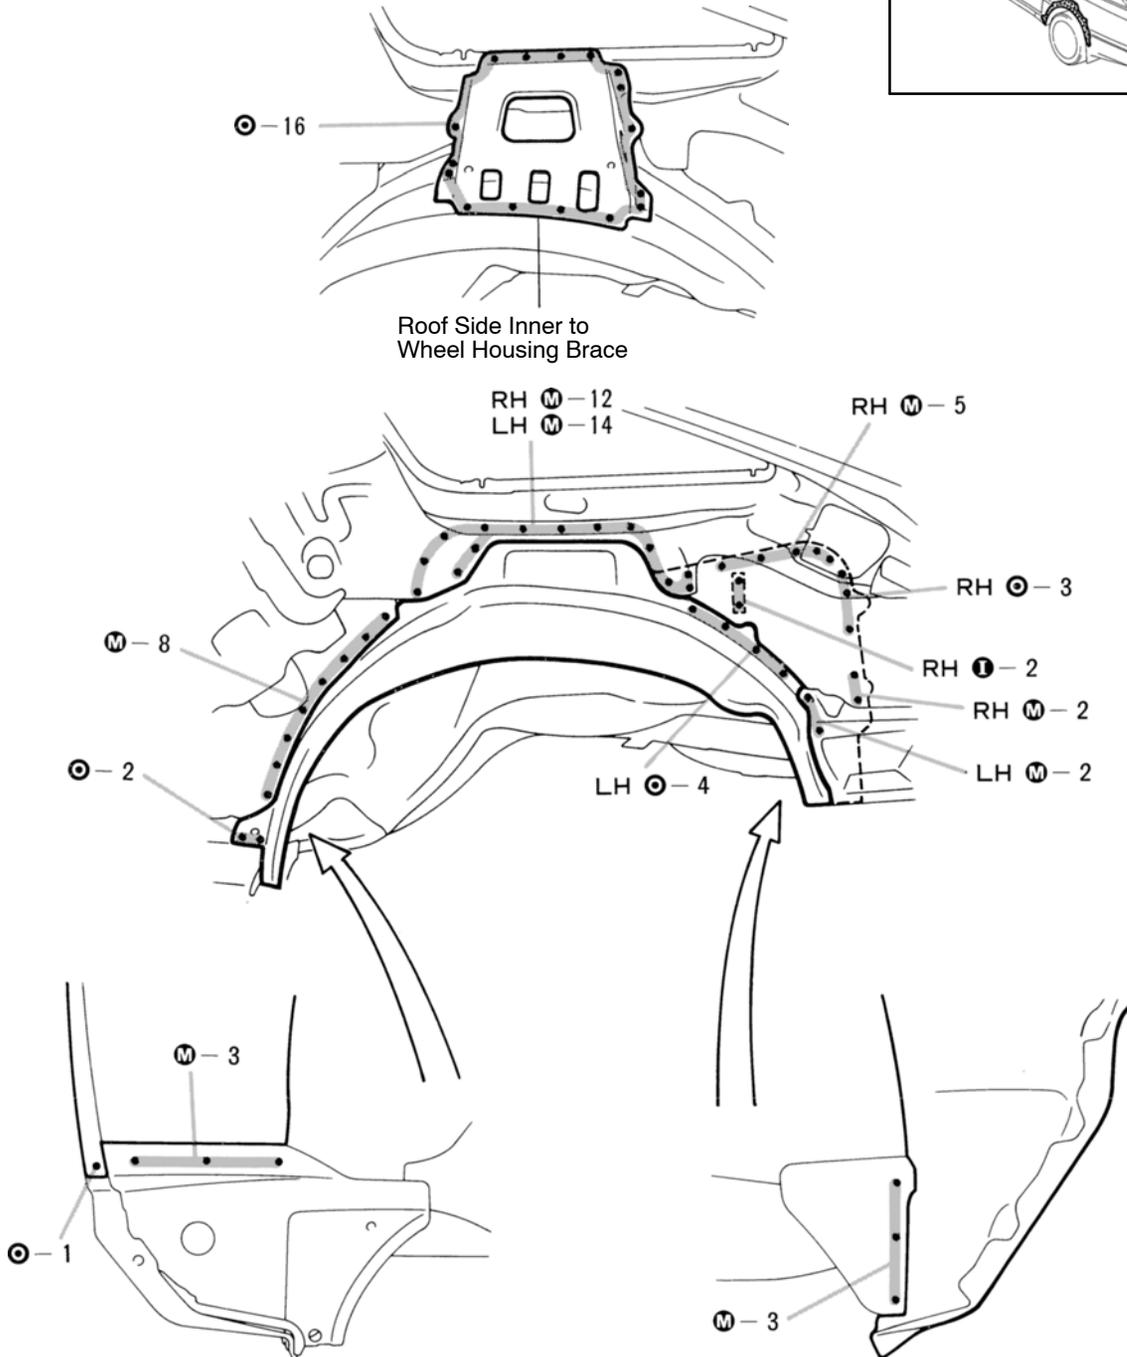



# QUARTER WHEEL HOUSING OUTER PANEL (ASSY)

## REMOVAL

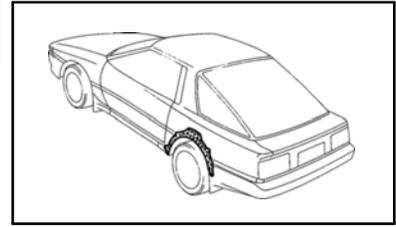

1. Before removing the quarter wheel housing outer panel, remove the roof side inner to wheel housing brace.

INSTALLATION

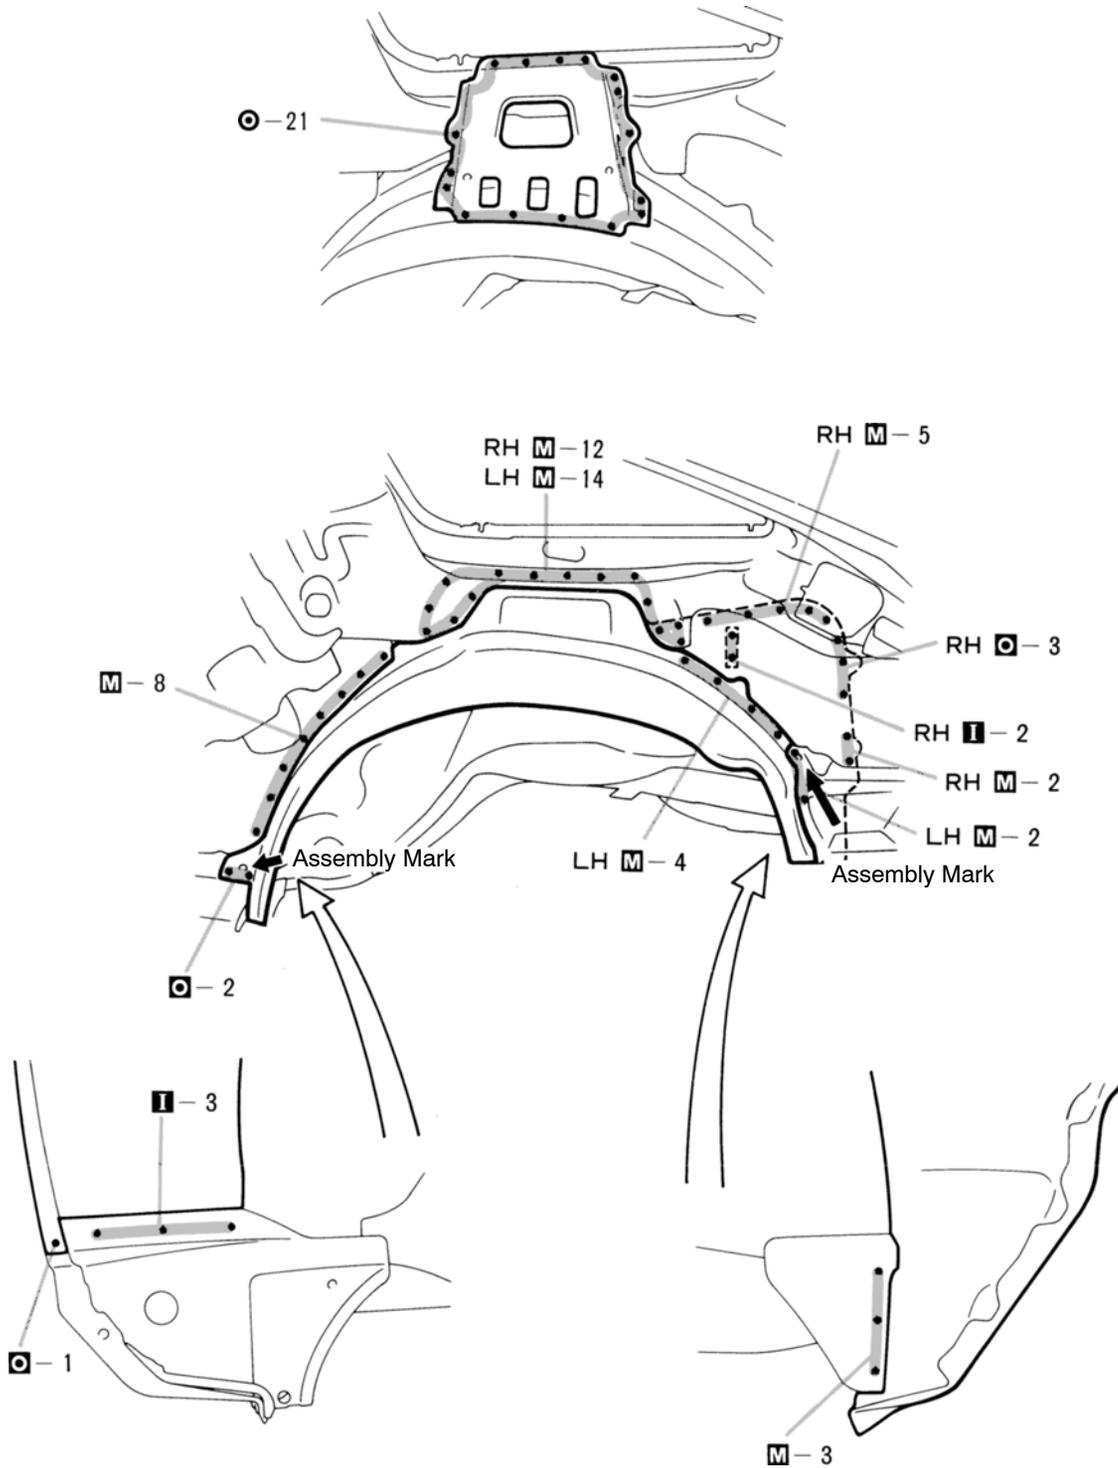

1. Determine the position of the new part by the assembly marks of the inner and outer panels.
2. Before welding the new part, temporarily install the quarter panel and check the fit.