
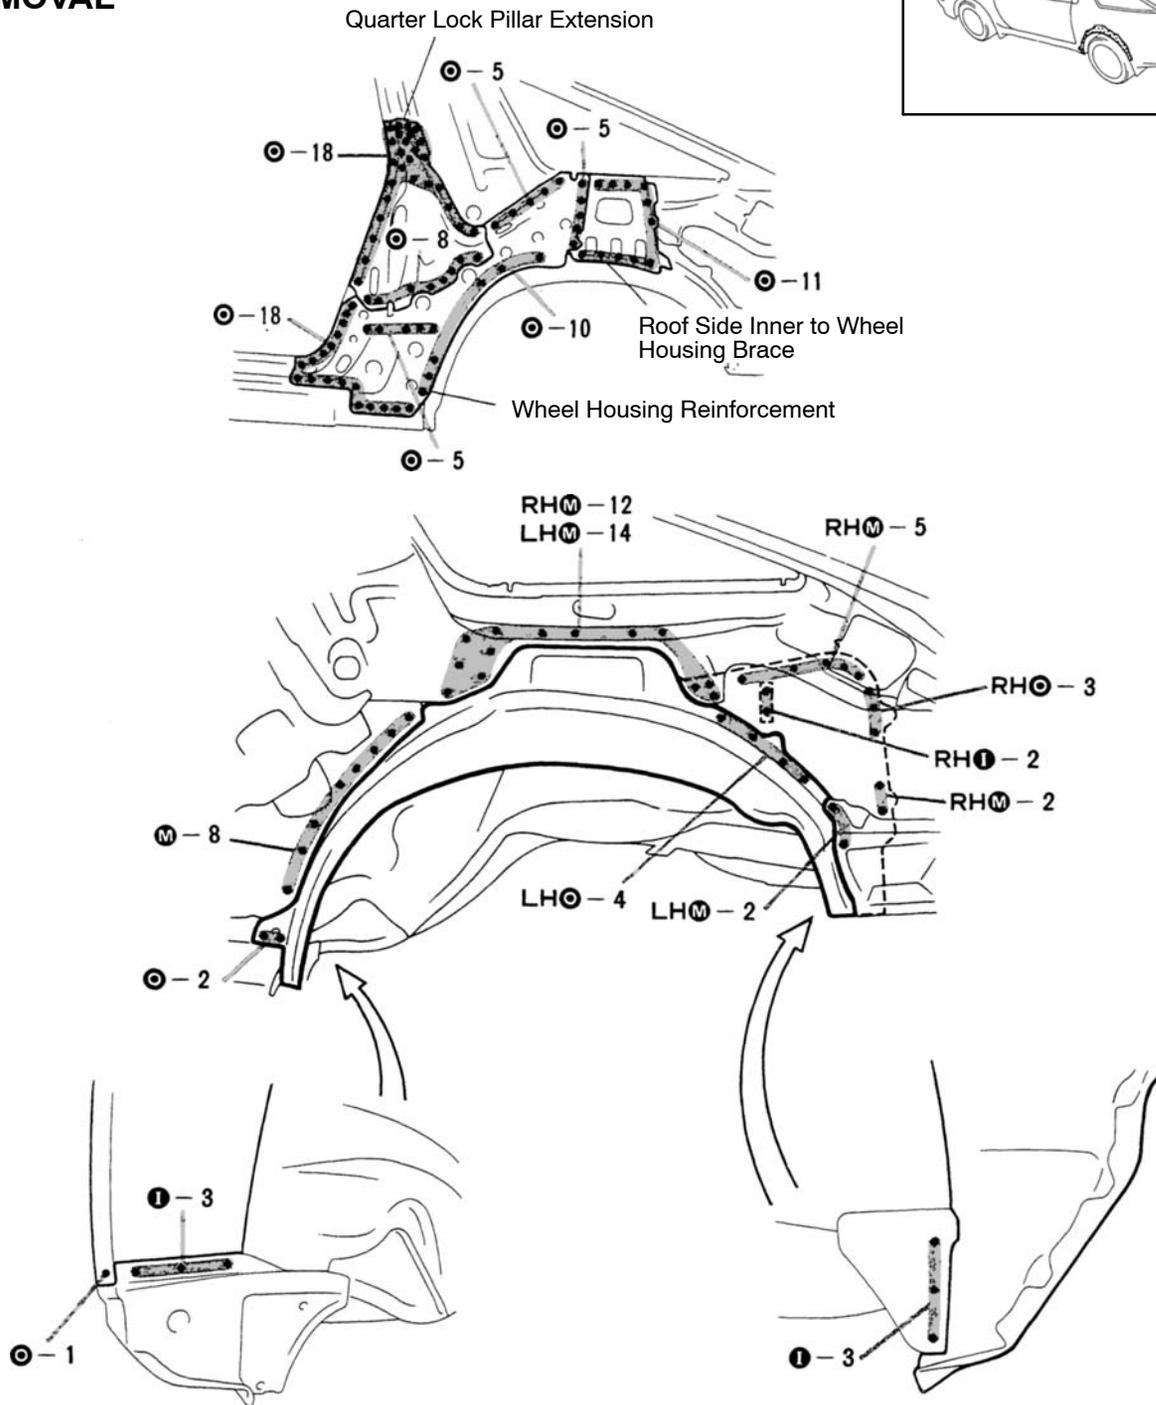



QUARTER WHEEL HOUSING OUTER PANEL

REMOVAL

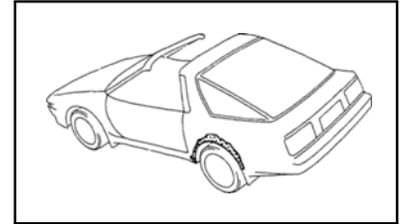

1. After removing the quarter lock pillar extension, wheel housing reinforcement and roof side inner to wheel housing brace, cut and join the quarter wheel housing outer panel.

INSTALLATION

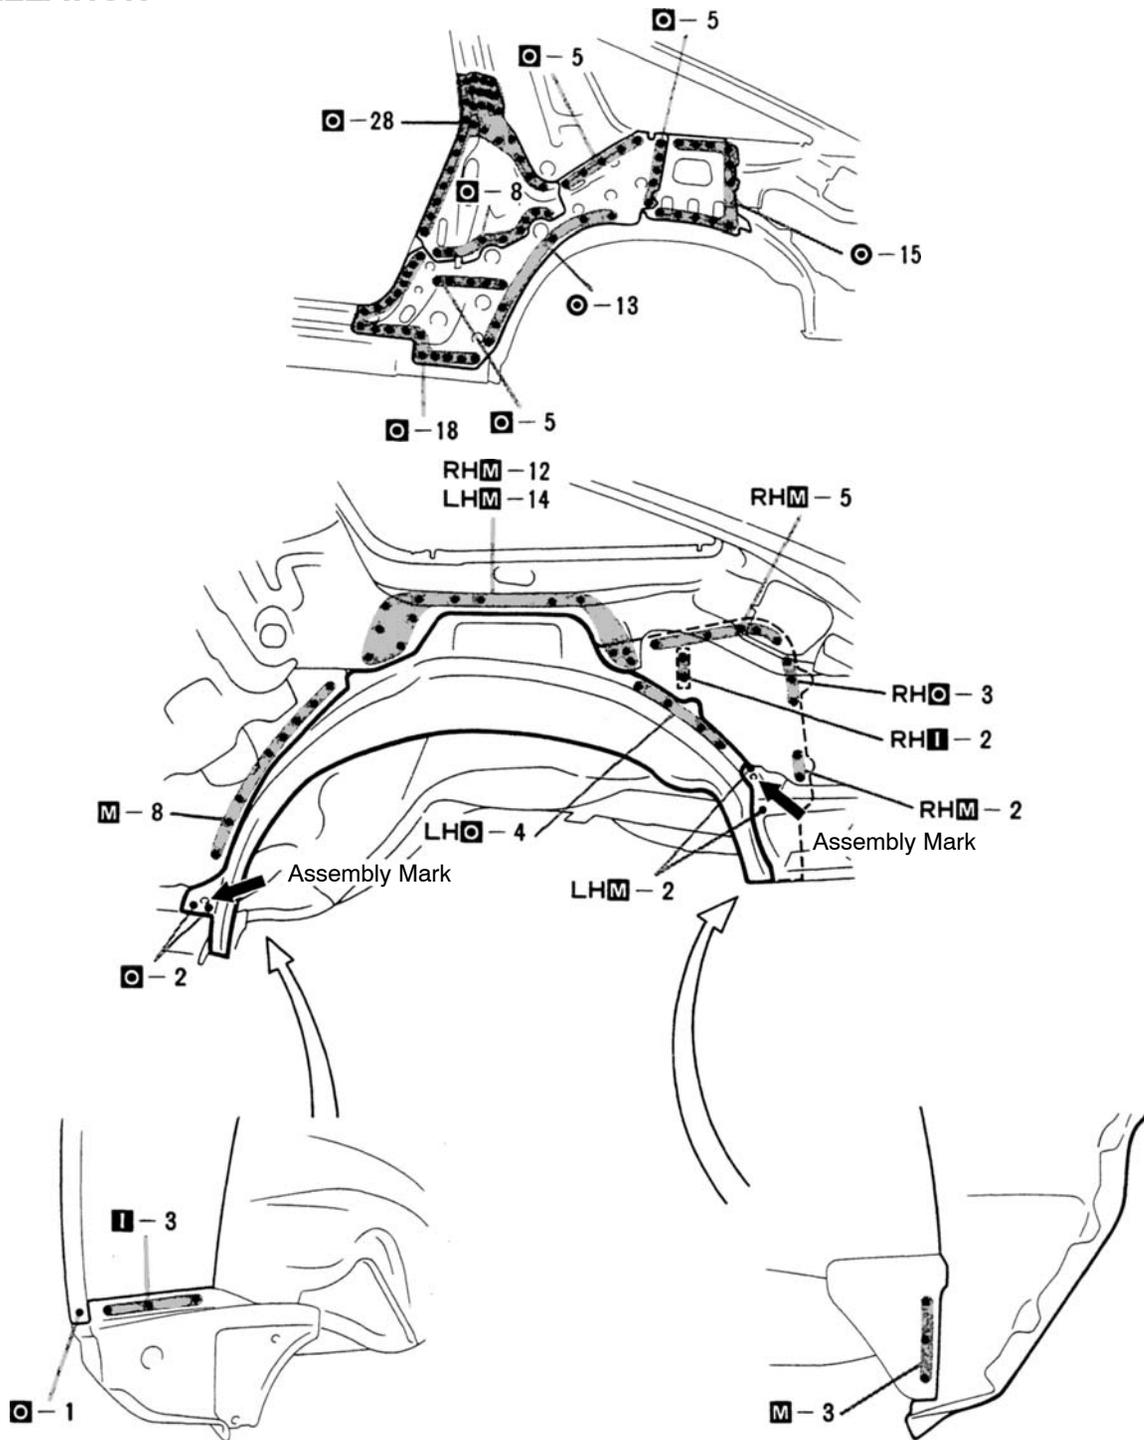

1. Determine the position of the new part by the assembly marks of the inner and outer panels.
2. Before welding the new part, temporarily install the quarter panel and check the fit.