
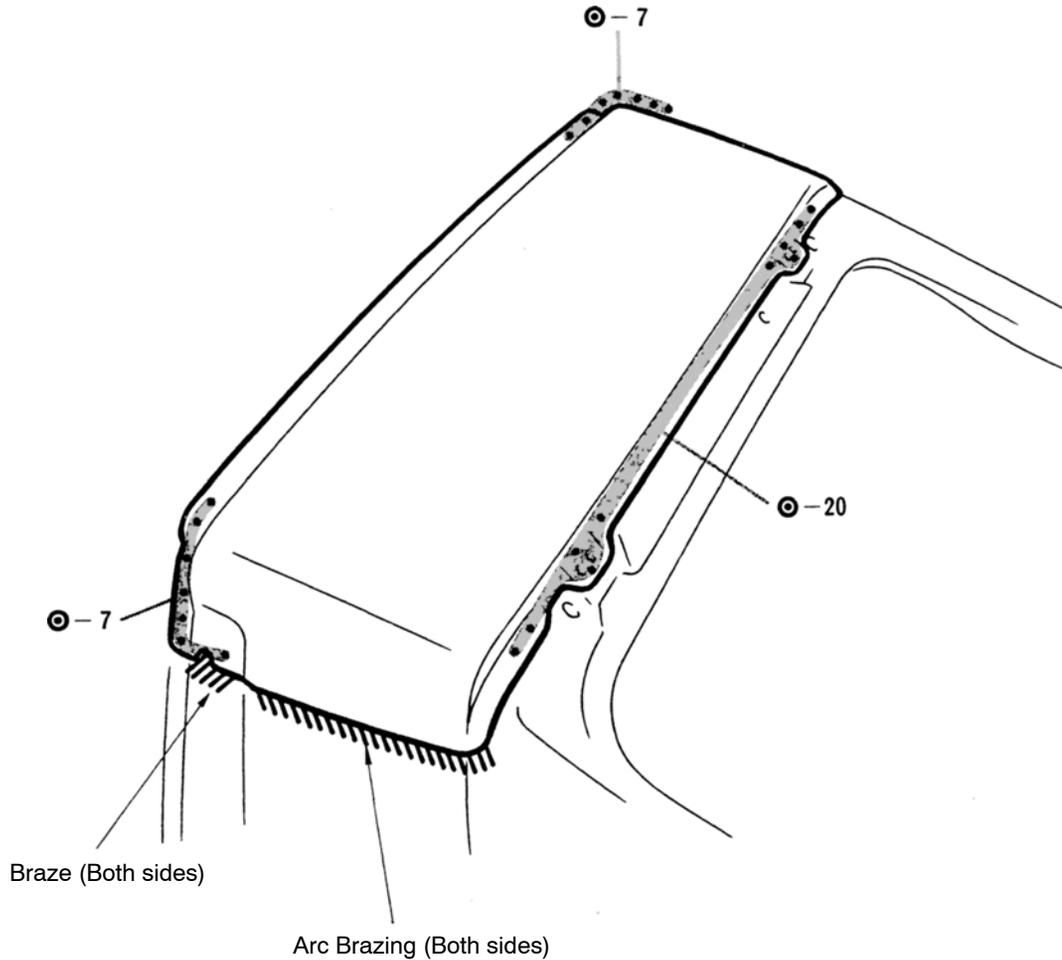


# ROOF PANEL (ASSY)


## REMOVAL

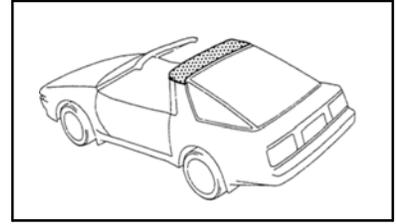

1. Heat the braze area of the quarter panel and scrape off the brazing with a wire brush.
2. Cut off the roof panel tip at the quarter panel arc brazing connection with a cut grinder etc.

**NOTE: Be careful not to overheat the pillar side.**

## INSTALLATION

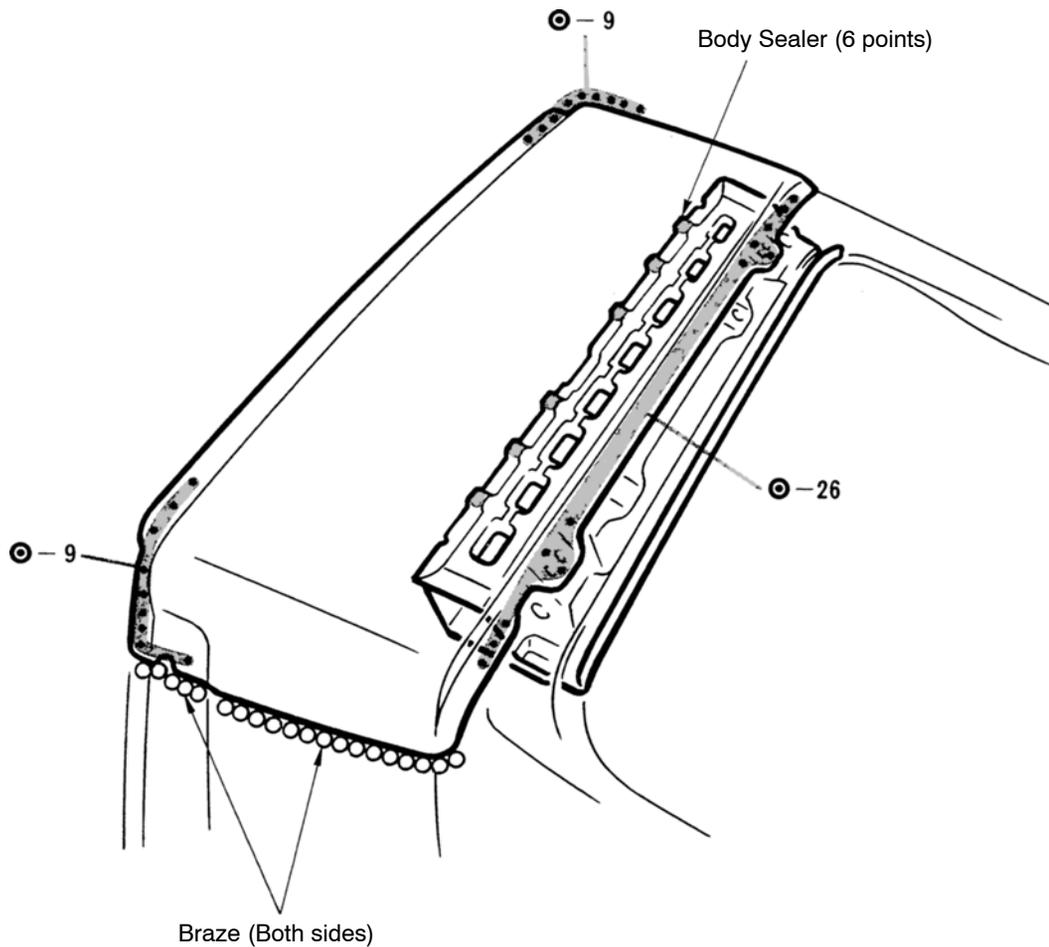

1. Before temporarily installing the new part, apply body sealer to the back door opening frame.

**NOTE:**

- 1) Apply just enough sealer for the new part to make contact.
- 2) For other sealing points, refer to section SU.

2. Braze the front body pillar and quarter panel connection.

**NOTE:** Before performing these operations, place a wet rag on the roof panel to protect it from damage.