


# HOW TO USE THIS MANUAL

Each repair method description provided in Section RE of this manual comprises two pages, divided into 2 blocks (REMOVAL AND INSTALLATION) and includes illustrations to facilitate body repair.

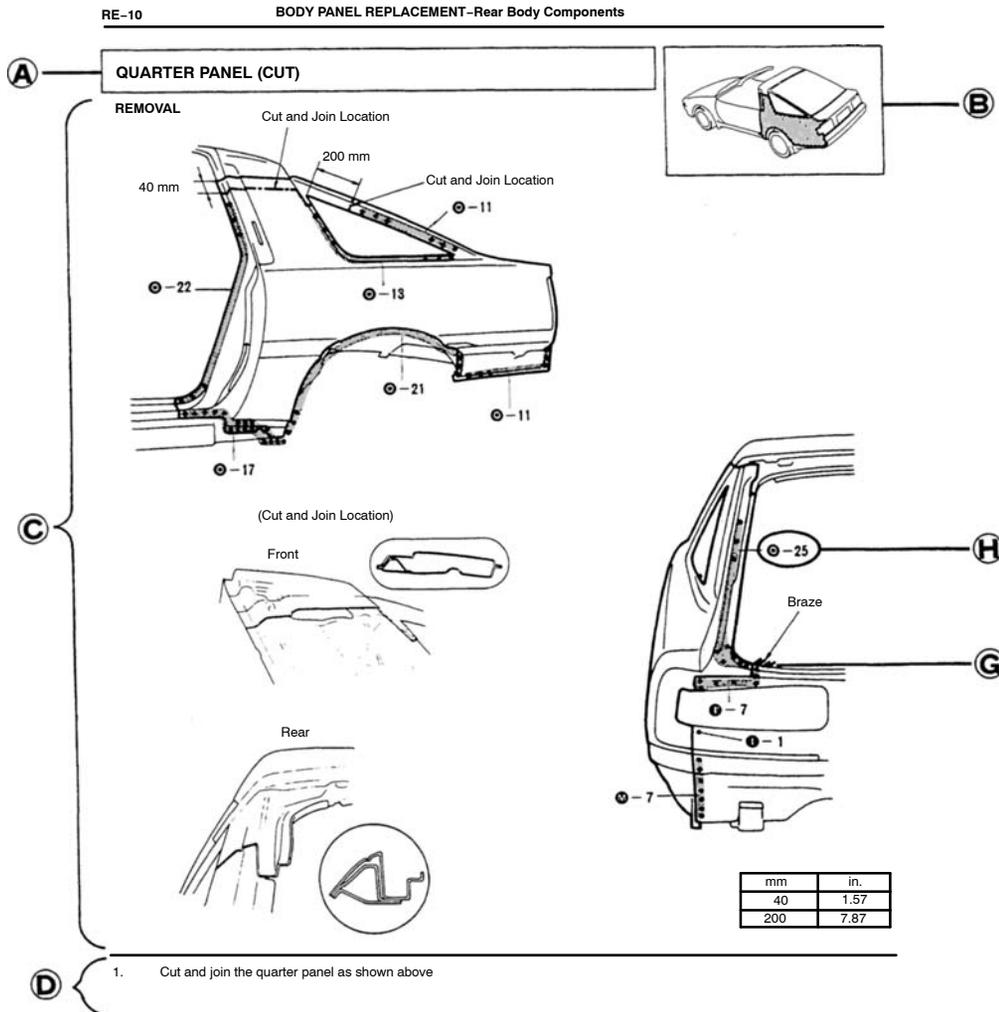

**A** **REPLACEMENT PART AND METHOD**

**QUARTER PANEL (CUT)**

- Replacement method
  - (ASSY) . . . . . Assembly replacement
  - (CUT) . . . . . Major cutting (less than 1/2 of part used)
  - (CUT-W) . . . . . Half cutting (about 1/2 of part used)
  - (CUT-P) . . . . . Partial cutting (most of part used)
- Replacement part

**B** **BODY VARIATIONS AND PART LOCATION**


Body variations: Non . . All models

**C** **REMOVAL DIAGRAM**

Describes in detail removal of the damaged part involving repair by cutting.

**D** **REMOVAL GUIDE**

Provides additional information to more efficiently help you perform the removal.

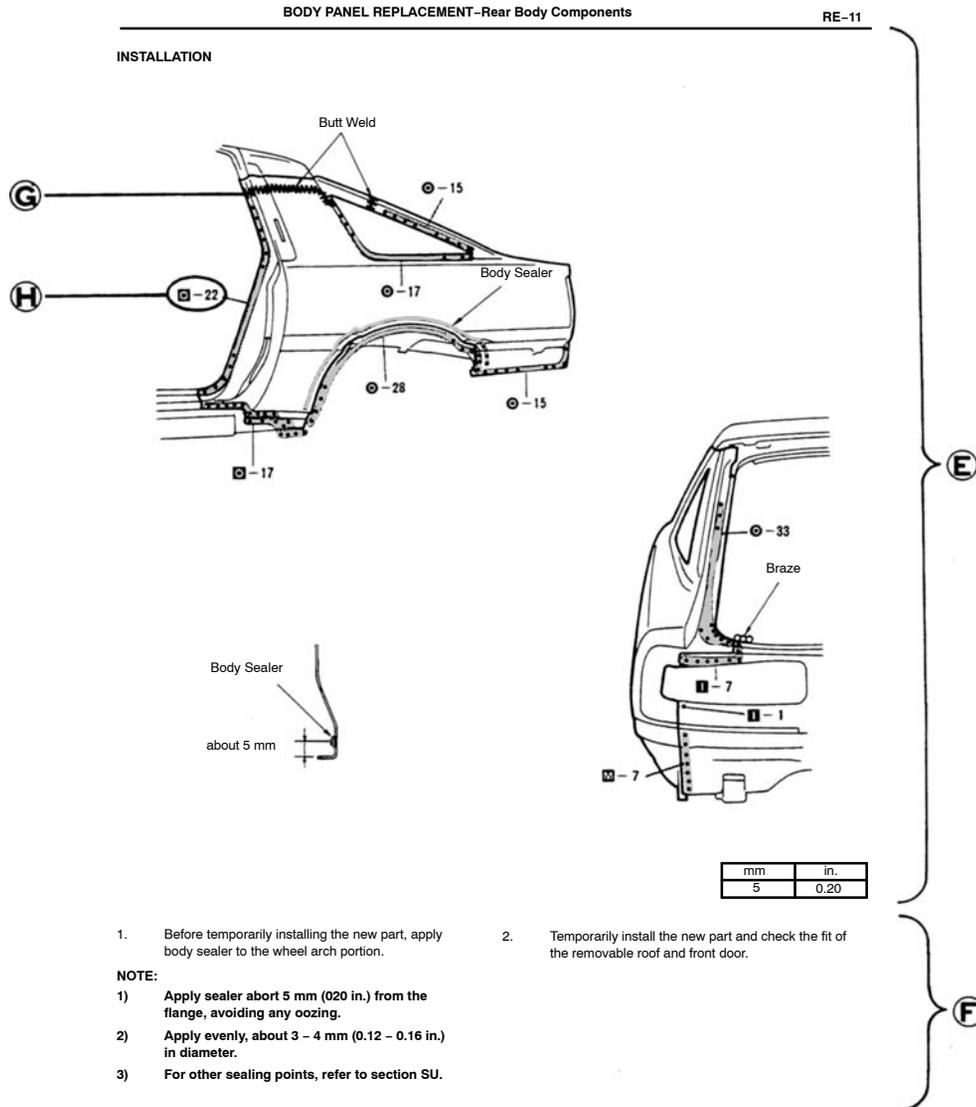

**E** **INSTALLATION DIAGRAM**  
Describes in detail installation of the new part involving repair by welding and/or cutting, but excluding painting.

**F** **INSTALLATION GUIDE**  
Provides additional information to more efficiently help you perform the installation.

**G** **SYMBOLS**  
See page [IN-4](#).

**H** **ILLUSTRATION OF WELD POINT**  
Weld method and panel position symbols.  
See page [IN-5](#).