
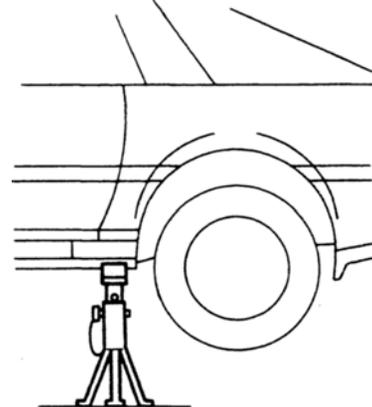
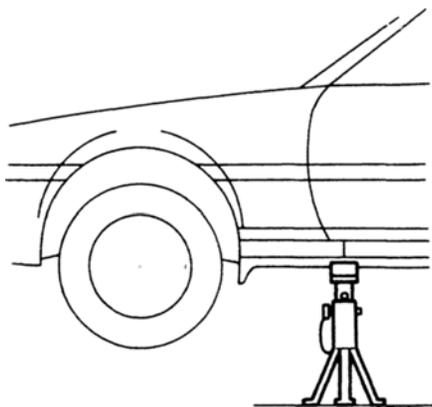


VEHICLE LIFT AND SUPPORT LOCATIONS

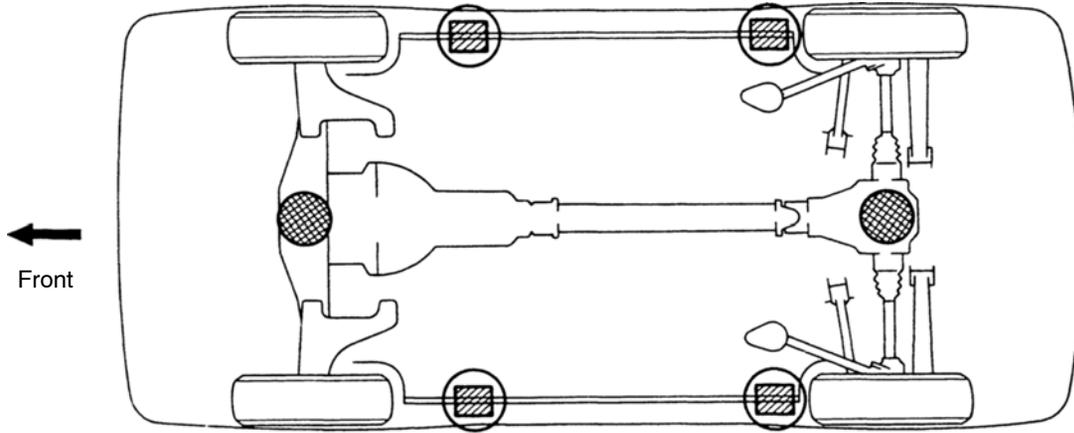

- JACK POSITION** _____ ●
- Front Center of front suspension crossmember
- Rear Center of differential carrier
- PANTOGRAPH JACK POSITION** _____ ○
- SUPPORT POSITION**
- Safety stand ▨